




Prerequisites: The vTuner for Alpine must be installed to an iPhone 4 or higher on iOS 5 or higher.

## (1) Launch – vTuner for Alpine

Please connect iPhone/iPod touch to Internet via 3G in advance of using 'vTuner for Alpine'

Launch 'vTuner for Alpine' application on the iPhone.

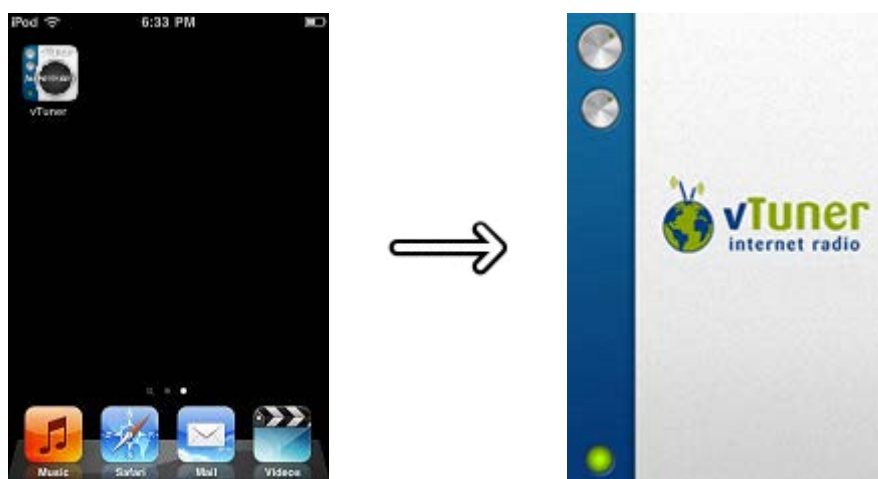

Change the source to vTuner at your CDE-135BT using the **SOURCE/** key.



If the vTuner source is not available, press the BAND/F/R key to switch the USB port between FRONT and REAR.


Should the vTuner source still not be available, vTuner was de-activated in the setup menu. Press and hold AUDIO/ SETUP for at least 2 seconds to activate the SETUP mode.

Turn the Rotary encoder to select *iPod and USB*, and then press **/ENTER**. Select VTUNER from the menu and select ON.



## (2) Playback

To Pause playback, press ►/|| . Pressing ►/|| again will resume playback.

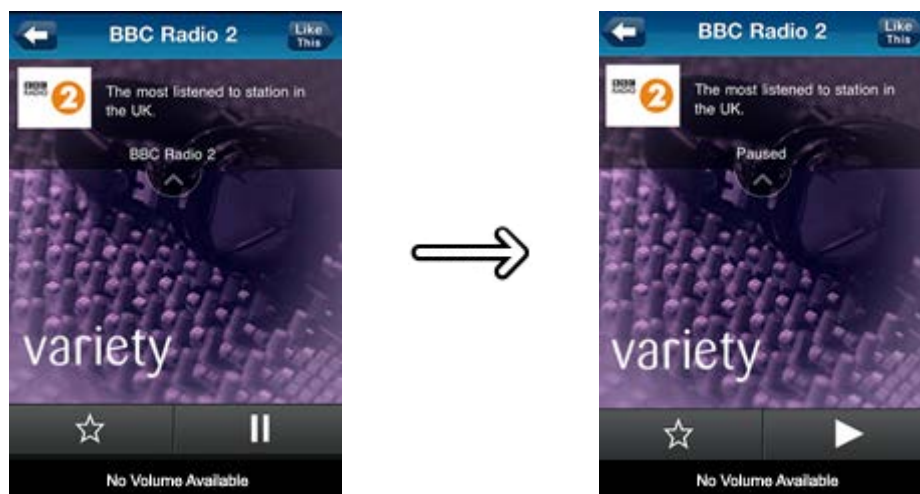

## (3) Searching for a desired station

(1) Press **Q/ENTER** to activate the search mode

(2) Turn the Rotary encoder to select “FAVORITES”, and then press **Q/ENTER**

The “FAVORITES” search mode is activated and the stored station names are listed. The **T** indicator lights up at this time.

(3) Turn the Rotary encoder to select the desired station, and then press **Q/ENTER** .

vTuner will play that station and the **♥** indicator will light up.

### Search by other modes:

vTuner provides you many ways to search a station, such as by Genre, Location, etc. And some search categories may include many search hierarchies.

(1) Press **Q/ENTER** to activate the search mode.

(2) Turn the Rotary encoder to select the desired search category, and then press **Q/ENTER** .



(3) Turn the Rotary encoder to select the desired subcategory/station within the selected category, and then press **Q/ENTER** .

(4) After step (3) if the  indicator still lights up, repeat step (3) until the desired station is searched.

#### (4) Storing a desired station to Favourite List

Press **▲** when the station you want to store is broadcasting.

The  indicator will light up after the station is added to the Favourite List successfully.

FAIL will be displayed if the station fails to be added to Favourite List or while the Favourite List is full when you want to add station to it.

#### (5) Jumping to a Favourite Station

During vTuner playback, press any of preset buttons (1 through 6).

The relevant station (1 through 6) stored in the Favourite List begins to broadcast and the  indicator lights up.

Notes

- Preset 1 to 6 are stations stored in the Favourite List in order of 1~6.
- You can also choose a stored station from FAVORITES search in search mode.

#### (6) Deleting a stored station from Favourite List

(1) Tune to a stored (favourite) station.

When a stored (favourite) station is broadcasting, the  indicator will light up.

(2) Press **▼** .

The  indicator will go off after the station is deleted from Favourite List.